
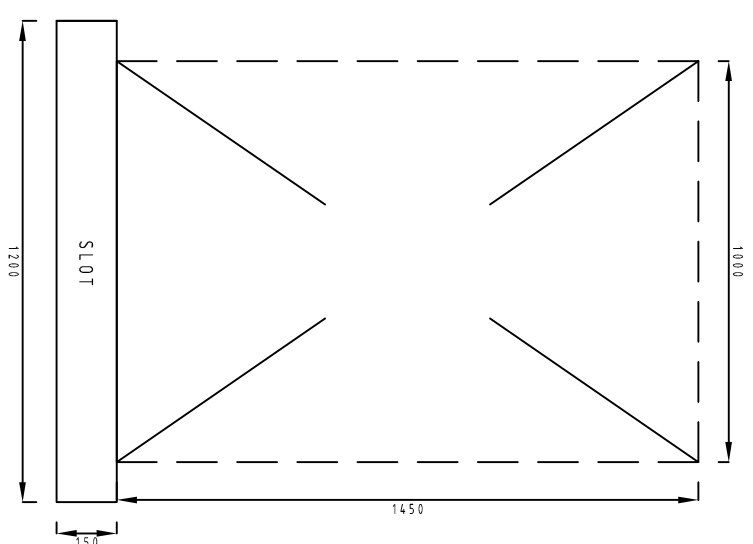



GENERATOR ON
PLINTH

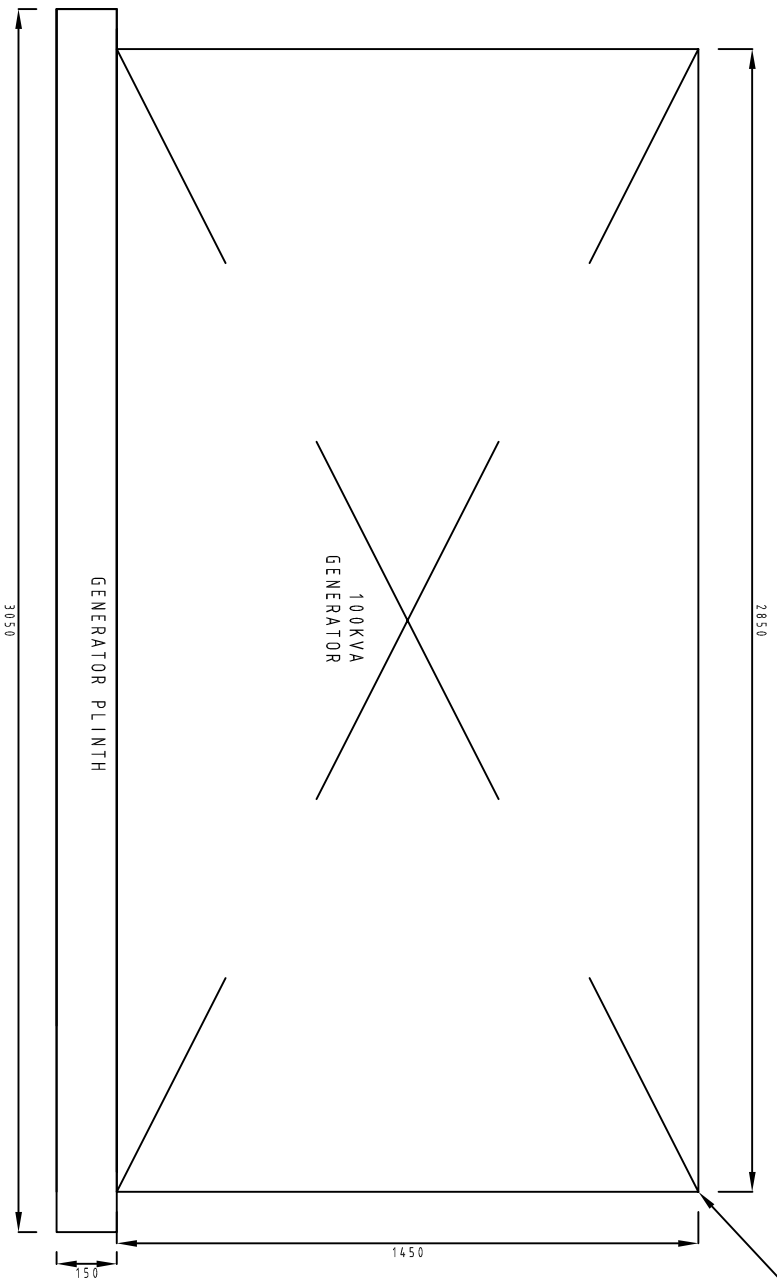

GENERATOR PLINTH

Note

The concrete plinth needs to be a minimum 30MPa concrete either vibrated or with 193 mesh, 50mm from the top.
The generator should be situated 800mm away from walls at all sides for ventilation & service purposes.

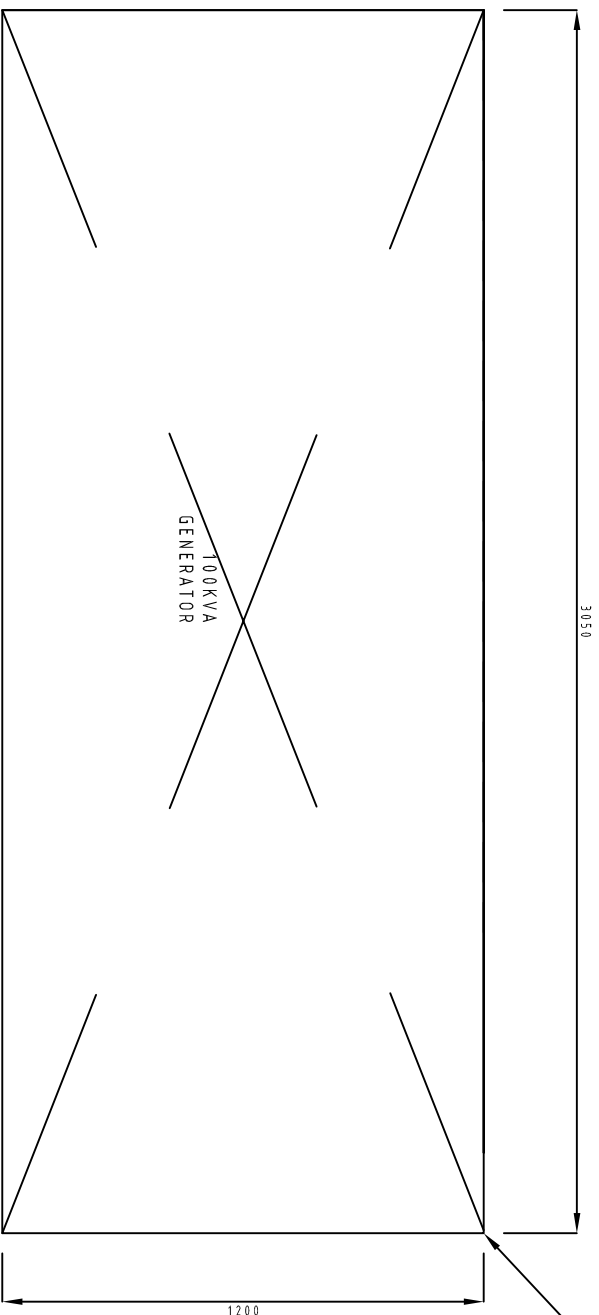

GEN-TEK

POWERED GENERATOR SOLUTIONS

Gen Motion Ltd Trading as GEN TEK
101 Derby Rd Judiths Paarl JHB 2000
Tel +27 11 627 7550 Fax +2711 614 5641
Website www.gen-tek.co.za E-mail sales@gen-tek.co.za

ELECTRICAL NOTES:

Rev	Description	Date
1	GENERATOR PLINTH	

PROJECT TITLE:

THIS IS AN AUTOCAD GENERATED DRAWING

DRAWING Title:

100KVA GENERATOR
PLINTH DETAIL

DRAWING No. E 100
REVISION: 1

DATE:
SCALE:
DESIGNED:
DRAWN:
CHECKED: